


Baseline BFM Series Flow Meters Installation Guide

Installation Instructions

1. Power off the two-wire when installing any two-wire device. Leave 24 to 36 inches of slack in the two-wire at the connection point to allow for easy installation and maintenance.
2. Follow the instructions in the Netafim installation manual to install the flow meter.
3. Connect the red and black wires from the flow biCoder to the corresponding red and black wires from the two-wire path. Make certain to maintain polarity. All two-wire connections must have 3M™ DBR/Y-6 or equivalent moisture-resistant connectors.
4. Follow the instructions in the controller's user manual to configure each device.

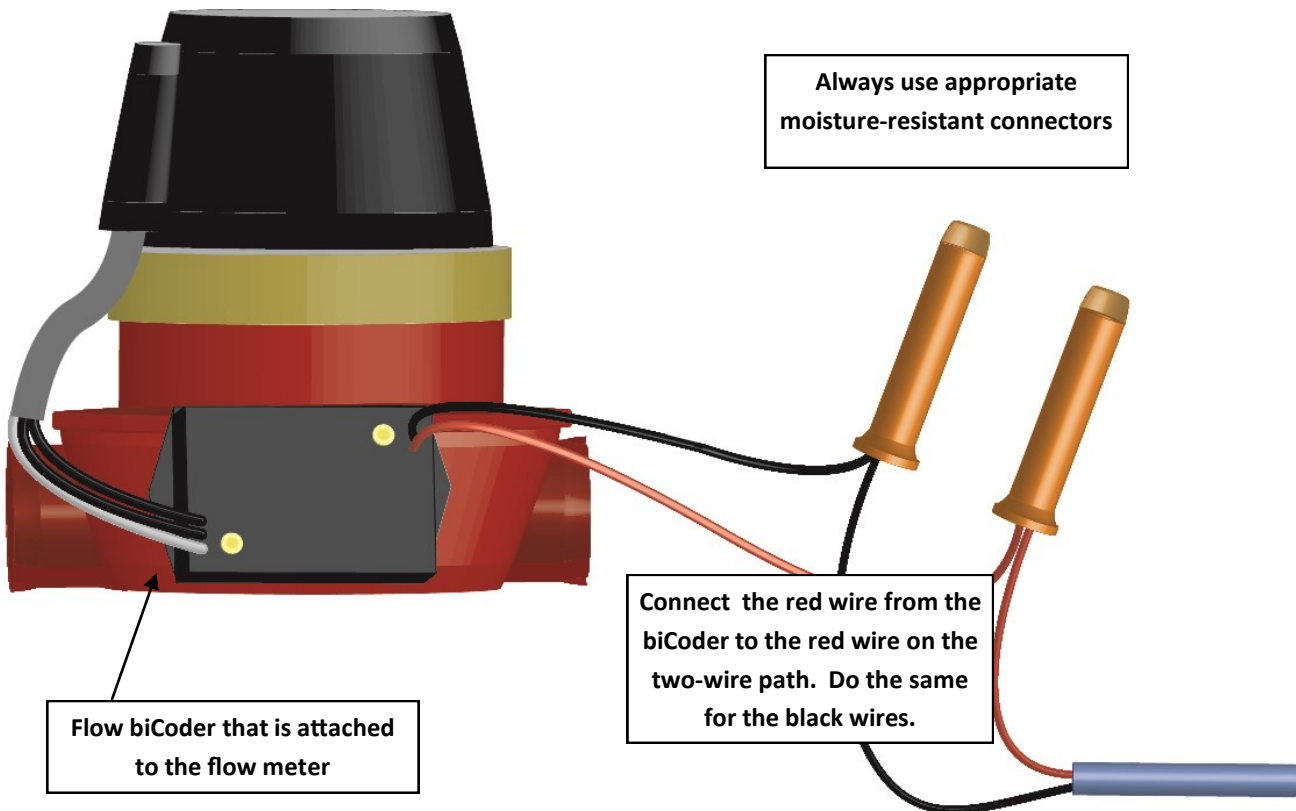

K Value and Offset Table

Model	Gallons per Pulse	Pulses per Gallon	K-Value	Offset	Suggested Operating Range (GPM)
BL-BFM075	0.015	666.67	0.09	0	0.2-11
BL-BFM100	0.0021	476.19	0.126	0	0.3-15.4
BL-BFM150	0.0074	135.14	0.444	0	0.9-44

