

# BaseStation 3200 Irrigation Controller Upper Threshold Moisture Sensor-Based Watering

---

If you have a Baseline soil moisture sensor (biSensor™) installed in your landscaping and connected to your BaseStation 3200 irrigation controller, you can program the controller to water based on the moisture levels in the soil. This watering strategy can reduce outdoor water use by up to 62 percent or more over traditional irrigation methods. And, by watering your plants when needed, you can increase landscape health, promote deeper root growth, and make your plants more disease resistant.

For areas that have a restricted schedule such as specific watering days or specific use schedules like sports fields, upper threshold (also referred to as “greater than limit” or “upper limit”) is a popular watering strategy. With upper threshold, you can choose which day and what time of day to start watering and the sensor will shut off watering when soil moisture reaches the upper threshold, which is usually slightly above field capacity.

The upper threshold watering strategy varies the zone water time each time the program runs in order to apply enough water to raise the moisture level to field capacity. Soak cycles are critical for this mode because the controller monitors the moisture level as water is applied. At the end of each soak cycle, the controller determines whether an additional water cycle is needed. After the upper limit has been reached, the controller will water for an additional 10% of the water time to increase deep watering.

**Note:** Make sure your program’s runtime is sufficient to raise the moisture content in the soil to field capacity. You should put down at least ½ - ¾ inch of water each time the controller is allowed to water.

## Overview of Soil Moisture Levels

The amount of moisture held in the soil varies depending on the type of soil and the amount of time between watering events. When you’re using a sensor-based watering methodology, you should have a general understanding of the water holding capacity of various types of soil. We’ve included a brief description of the standard soil moisture content levels in this document. You can learn more about soil moisture content, soil classification, infiltration, and water movement in Baseline’s document titled [Watering with Soil Moisture Sensors](#).

Soil moisture content is identified by the following levels:

**Saturation:** At the saturation level, nearly all of the spaces between soil particles are filled with water. As a rule, irrigators do not want to saturate the soil because it cuts off the plant’s supply of oxygen, which, in effect, drowns the plant.

**Field Capacity:** When soil is at the field capacity level, it means that all excess moisture has drained freely from that soil. The amount of remaining moisture is the field capacity. To irrigate properly, you would turn off the water when the soil in the root zone of the plants reaches field capacity. A Baseline biSensor measures field capacity in the calibration process and uses this value as the basis for other settings.

**Maximum Allowed Depletion (MAD):** In most cases, the maximum allowed depletion level is just before the plants begin to show visible signs of stress. Irrigators typically start watering at or before MAD is reached because they don't want their landscapes to show signs of stress. MAD is not measured because it is based on observation and opinion. The biSensor can automatically set a MAD threshold for you based on the measurement of field capacity; however, keep in mind, this setting is based on a calculation, and we encourage our customers to fine tune their thresholds.

**Permanent Wilting Point:** At the permanent wilting point, the level of water in the soil is not sufficient to meet the plant's needs.

### Overview of the Steps for Configuring the Upper Threshold Watering Strategy

Perform the following steps to configure the controller for upper threshold watering:

Step 1 – Install the biSensor in the landscaping according to the instructions that came with the device.

Step 2 – Set up a primary zone and configure the zone settings.

Step 3 – Create a scheduling group.

Step 4 – Search for and assign the biSensor to the primary zone.

Step 5 – Configure the biSensor and set up the watering strategy.

Step 6 – Set up the start time for the program.

Step 7 – Set up the start days for the program.

Step 8 – Set up the water windows for the program.

Step 9 – Set the controller to run.

### Step 1 – Installing the biSensor

The biSensor needs to be placed in the effective root zone of the plant it is monitoring. Usually the biSensor will be making the irrigation decision for many plants or even multiple zones of plants with similar water needs, so it should be placed in the effective root zone of a representative plant.

Take note of the serial number of the biSensor that you are installing in the landscape. You will need this number when you program the controller.

Follow the wiring instructions in the biSensor installation guide to connect the biSensor to the two-wire path or to the biSensor ports on the controller or on the powered biCoder.

Make sure that you maintain polarity on the wire connections.

Fasten the wiring with wire nuts, and then test communication with the controller before you complete the installation with waterproof connectors.

## Step 2 – Setting Up a Primary Zone and Configuring the Zone Settings

After you have defined the area that will be watered by the sensor-based strategy, identify the zones that water that area. From those zones, select one to be associated with the sensor. Then, in the controller, designate that zone as the primary zone.

In addition to being the zone that is associated with a sensor, a primary zone is the zone within a scheduling group that all other linked zones are linked to. Changing the programming on this zone will adjust the programming on all linked zones, resulting in saved time and consistency.

**Note:** The primary zones of a program always run first.

### Prerequisites

- biCoders have been assigned to zones.
- If you are using soil moisture sensors, they have been installed and detected by the controller.
- You know the number of the zone that waters the area where the sensor is installed.


### To assign a primary zone

1. Turn the dial to the **Zones** position.
2. Verify that the number displayed in the **Program** field matches the program in which you want to set up the primary zone. If the zone is enabled in multiple programs and you want to set up the primary zone in a different program, press the + or – button to change the program number.

**Note:** A zone can only be a primary zone in one program. The programs that this zone is assigned to are listed in the lower-left corner of the screen.

3. Press the **Next** button to move to the **Zone** field, and then press the + or – button to select the zone that you want to assign as a primary zone.
4. Press the **Next** button to move to the **Zone Mode** field.
5. Press the + or – button until **Primary** displays in the **Zone Mode** field.

**Note:** If you change the mode of a zone to Primary or from Primary to another mode, you will potentially affect the programming of other zones. For example, a primary zone has 20 linked zones. If you change the mode of the primary zone to linked or timed, the links to the 20 zones will be broken.

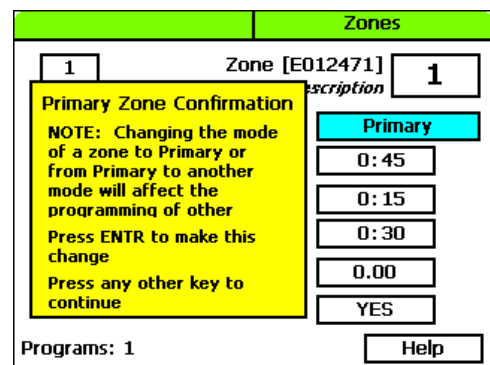

## To configure the zone settings

Upper threshold watering starts a watering cycle on each start time for the primary zone and adjusts the watering time to raise the moisture level back up to the upper limit (field capacity). The controller increases or decreases the water time, but it never adjusts more than twice your initial water time.

When you set a program to start based on a biSensor reading that is greater than the limit, you need to set up at least 3 soak cycles with a soak time that is at least twice as long as the cycle time. Soak cycling breaks the total runtime into shorter water “cycles” with “soak” periods in between to allow time for water to soak into the soil.

1. Press the **Next** button to move to the **Water Time** field.

- Set zone water times to apply  $\frac{1}{2}$  -  $\frac{3}{4}$  inch of water.
- If you want to increase the value in the hours place, press the **+** button.
- If you want to change the value in the minutes place, press the **Next** button, and then press the **+** or **-** button.

**Note:** When you change the water time setting for a linked zone, notice that a percentage displays to the left of the Water Time field. This percentage compares the new value with the value in the Water Time field for the Primary zone and establishes a tracking ratio. The ratio will be maintained when changes are made to the primary zone’s water time.

Zones	
1	Zone [E012471] <span style="border: 1px solid black; padding: 2px;">1</span>
Program	Zone1 Description
	Zone Mode <span style="border: 1px solid black; padding: 2px;">Primary</span>
	Water Time (h:mm) <span style="border: 1px solid black; padding: 2px;">0:45</span>
	Cycle Time (h:mm) <span style="border: 1px solid black; padding: 2px;">0:15</span>
	Soak Time (h:mm) <span style="border: 1px solid black; padding: 2px;">0:10</span>
	Flow <span style="border: 1px solid black; padding: 2px;">0.00</span>
	Enabled <span style="border: 1px solid black; padding: 2px;">YES</span>
Programs: 1	<span style="border: 1px solid black; padding: 2px;">Help</span>

**Tip:** Let the controller calculate the cycle time and soak time settings for you. Press the **Next** button to move to the minutes placeholder in the **Soak Time** field, and then press the **Back** button. The controller divides the time in the Water Time field by 3. This value is used for the cycle time and the default soak time is 30 minutes.

2. Press the **Next** button to move to the **Cycle Time** field. The cycle time defines the duration of each watering cycle interspersed with soak times.

**Note:** You cannot change the cycle time setting for a linked zone.

3. Press the **Next** button to move to the **Soak Time** field. The soak time defines the duration of each soaking cycle interspersed with watering times.

**Note:** You cannot change the soak time setting for a linked zone.

4. Press the **Next** button to move to the **Flow** field. If you know the gallons per minute flow for this zone, you can press the **+** or **-** button to enter it in this field. You can also perform a Learn Flow operation to update this field. Refer to Learning Flow by Zone in the BaseStation 3200 User Manual.

5. Press the **Next** button to move to the **Enabled** field. Press the **+** or **-** button to toggle the value in the field between **YES** and **NO**.

**Note:** If you want to prevent a zone from running, you can temporarily set the Enabled field to **NO**. When you want the zone to run again, return to the Zones dial position and change this setting to **YES**. This setting disables the zone in all programs.


### Step 3 – Creating a Scheduling Group

1. Turn the dial to the **Zones** position.
2. Verify that the number displayed in the **Program** field in the upper-left corner of the screen matches the program in which you want to set up the scheduling group. If the zone is enabled in multiple programs and you want to set up the scheduling group in a different program, press the **Next** button to move to the **Program** field, and then press the + or – button to change the program number.  
**Note:** You can only link a zone to its primary zone within the same program. Linked zones cannot cross programs.
3. In the **Zone** field, press the + or – button to select the zone that you want to link.
4. Press the **Next** button to move to the **Zone Mode** field.
5. Press the + button to change the entry in the field so it shows **Linked-#**.
6. To continue linking zones, press the **Enter** button until the number of the zone that you want to link displays in the **Zone** field at the top of the screen.
7. Repeat steps 5 and 6 until you have linked all the zones in the group to the primary zone for that group.

### Step 4 – Assigning the biSensor to the Primary Zone

When you use soil moisture sensors (biSensors) to monitor your zones, you need to assign a biSensor to a primary zone. If you have not configured any primary zones, you will not be able to complete the following procedure. Refer to Step 2 in this document.

1. Turn the dial to the **Smart Watering** position.
2. The **Moisture Sensor Assignments** option should be highlighted. If it is not highlighted, press the + or – button to highlight it.
3. Press the **Enter** button. The Assign Sensors screen displays.
4. The **Search** option should be highlighted in the column on the left. If it is not highlighted, press the + or – button to highlight **Search**.
5. Press the **Enter** button. The system lists the serial numbers of all biSensors that it finds.  
**Note:** The BaseStation 3200 supports 25 biSensors.
6. Press the + or – button to highlight the serial number of the biSensor that you want to assign, and then press the **Enter** button. The serial number moves from the list on the left to zone address on the right.

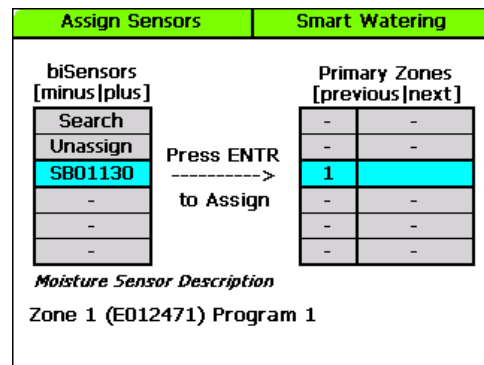

## Step 5 – Configuring the biSensors and Setting Up Watering Strategies

1. Turn the dial to the **Smart Watering** position.
2. Press the **Next** button to select **Moisture Sensor Setup**, and then press the **Enter** button. The Sensor Setup screen displays.
3. If you have more than one biSensor installed and assigned to a primary zone, verify that the correct primary zone displays in the **Sensor Primary Zone** field (the serial number of the assigned biSensor displays in the lower-left corner of the screen). If the biSensor that you want to configure is not displayed in the field, press the **+** or **-** button to select the correct one.

Sensor Setup	Smart Watering
Sensor Primary Zone {Front Raised Bed}	<input type="text" value="1"/>
Water Strategy	<input type="text" value="Upper Limit"/>
Upper Limit (shut off)	<input type="text" value="30.0%"/>
Limit Adjustment	<input type="text" value="0.0 %"/>
Calibration Cycle	<input type="text" value="One Time"/>
<input type="button" value="Help"/>	

4. Press the **Next** button to move to the **Water Strategy** field, and then press the **+** or **-** button to select the **Upper Limit** water strategy.
5. Press the **Next** button to move to the **Upper Limit** field. Press the **+** or **-** button to change the number in the field.

**Note:** When you choose the upper threshold water strategy, you must set and manage the upper watering limit. You can have the controller perform an initial calibration cycle to establish the starting limit value. This calibration cycle will be run on the first start time, two days after the biSensor installation date. After the initial calibration cycle has been run, you must monitor the moisture levels and plant health so you can make adjustments as needed.

6. Press the **Next** button to move to the **Limit Adjustment** field.

**Note:** This field is typically used to offset the limit set by a calibration cycle. You can use this adjustment to make the soil a little wetter or a little drier than the controller set limit. If you think that you might need to use this field, contact Baseline Support for help.

7. Press the **Next** button to move to the **Calibration Cycle** field.
  - **Never** – No calibration cycle will be performed
  - **One Time** – A single calibration cycle will be performed at the next start time
  - **Monthly** – A calibration cycle will be performed each month at the first start time

**Note:** Calibration cycles require that soak cycles be enabled. When you set these watering strategies, soak cycles will be automatically enabled.

8. When you have finished making changes, turn the dial to the **RUN** position.

**Note:** If for any reason the biSensor becomes damaged or fails (12 hours of failed data or communication) the corresponding primary zone and linked zones will water based on a timed operating mode which is based on set water times and program schedule.

## Step 6 – Setting the Start Time for the Program

1. Turn the dial to the **Programs** position.
2. The **Program Start Times Setup** option should be highlighted. If it is not highlighted, press the **Next** button to highlight it.
3. Press the **Enter** button. The Start Times screen displays.
4. Verify that the number displayed in the **Program** field matches the program that you want to set start times for. If you want to select a different program, press the **+** or **-** button to change the program number.
5. Press the **Next** button to move to the start times grid.
6. Press the **+** or **-** button to set the time in the first cell.
7. Press the **Next** button to move to the next cell in the start times grid, and then press the **+** or **-** button to set additional start times as needed.

Start Times		Programs	
Program /ML1 <input type="text" value="1"/>			
Program 1			
9:10A	-	-	-
-	-	-	-
<input type="button" value="Help"/>			

## Step 7 – Setting the Start Days for the Program

The upper threshold watering strategy is particularly useful for landscapes that need to be at a desired moisture level on a regular schedule, such as sports fields or heavy use parks. On these types of properties, damage to turf takes place when the soil is either too wet or too dry.

1. Turn the dial to the **Programs** position.
2. Press the **Next** button to highlight the **Program Start Days Setup** option, and then press the **Enter** button. The Start Days screen displays.
3. Verify that the number displayed in the **Program** field matches the program that you want to set start days for. If you want to select a different program, press the **+** or **-** button to change the program number.
4. Press the **Next** button to move to the **Schedule Type** field where you should select the schedule that best suits the type of property you are watering.

Start Days		Programs															
Program /ML1 <input type="text" value="1"/>																	
Program 1																	
Schedule Type		<input type="text" value="Days of the Week"/>															
Days of the Week		<table border="1"> <tr> <td>S</td> <td>M</td> <td>T</td> <td>W</td> <td>T</td> <td>F</td> <td>S</td> </tr> <tr> <td>Y</td> <td>Y</td> <td>Y</td> <td>Y</td> <td>Y</td> <td>Y</td> <td>Y</td> </tr> </table>		S	M	T	W	T	F	S	Y	Y	Y	Y	Y	Y	Y
S	M	T	W	T	F	S											
Y	Y	Y	Y	Y	Y	Y											
<input type="button" value="Help"/>																	

**Note:** If you want information about the schedule types that are available, refer to Setting Up the Start Days for a Program in the BaseStation 3200 User Manual or view the online help on the Start Days screen on the controller.

## Step 8 – Setting Up the Water Windows for a Program

Water windows tell the controller when watering is allowed and not allowed. You can set water windows for either Weekly (shown on illustration below) or daily – when moving from weekly to daily, the weekly settings are copied to each day of the week.

Selecting daily water windows gives you hourly control of watering for each day of the week, and for each program. A white square will pause watering for that hour, or keep a start time from starting a program.

1. Turn the dial to the **Programs** position.
2. Press the **Next** button to select the **Program Water Windows Setup** option. The Water Windows screen displays.
3. Press the **+** or **–** button to select the program that you want to set up water windows for.
4. Press the **Next** button to move to the **Water Window Type** field, and then press the **+** or **–** button to select either Weekly or Daily.

**Note:** If you use “Weekly” to set up the water windows and then you decide to convert to “Daily,” the weekly settings are copied to each day of the week.

Water Windows		Programs										
Program /ML1		1										
Program <i>i</i>												
Water Window Type		Weekly										
Day of the Week		All Week										
ENTR to set All hours to		OFF										
Allow Watering <input type="checkbox"/>		Do Not Allow Watering <input type="checkbox"/>										
AM	12	1	2	3	4	5	6	7	8	9	10	11
PM	12	1	2	3	4	5	6	7	8	9	10	11
Help												

Selecting daily water windows gives you hourly control of watering for each day of the week and for each program.

5. Press the **Next** button to move to the **Day of the Week** field. If you are using the “Weekly” Water Window Type, you cannot change the setting in this field, but if you are using “Daily,” press the **+** or **–** button to display the day of the week that you want to set up water windows for.
6. Press the **Next** button to move to the **ON/OFF** field.
  - If the boxes in the grid are blue (allow watering), the field displays **OFF**. Press the **Enter** button to turn all the water windows off.
  - If the boxes in the grid are white (do not allow watering), the field displays **ON**. Press the **Enter** button to turn all the water windows on.
7. To make changes to the individual boxes in the grid, press the **Next** button. The color of the number in the first box of the grid changes to red (indicating that you can change the setting in that box).
  - To change the water setting for the time/day represented by that grid, press the **+** button.
  - To move to next box in the grid, press the **Next** button.

**Note:** If you want to set up daily water windows, start by setting a basic profile in weekly mode, and then change to daily mode to modify specific days (like a mow day). Pressing the Enter button will maintain the current selected field and advance through the days of the week.

## Step 9 – Setting the Controller to Run

When you have finished making changes, turn the dial to the **RUN** position.