

BaseStation 1000


Updating the Firmware from BaseManager

You can use this method when your controller is **connected** to the Internet. This method installs the firmware update directly from BaseManager to your controller.


We recommend that you back up your current configuration before starting this process in case you need to restore your system. Refer to Backing Up the Controller Programming in your controller's user manual.

Note: You can update the controller remotely by performing the following steps in LiveView.

1. Press the **System Setup** button. The System Setup menu displays.
2. Press the \downarrow button to highlight the **Network Setup** option, and then press the **OK** button to select it. The Network Setup menu displays.
3. Press the \downarrow button to highlight the **BaseManager Info** option, and then press the **OK** button to select it. The BaseManager Info screen displays. Verify that your controller is connected to BaseManager.

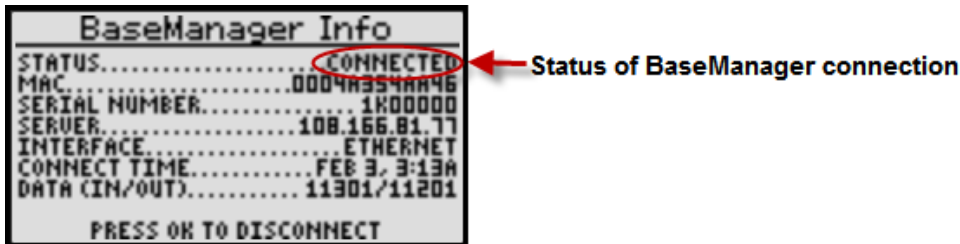

4. Press the **Back** button to return to the System Setup menu.
5. Press the \downarrow button to highlight the **Firmware Update** option, and then press the **OK** button to select it. The Firmware Update menu displays.
6. Press the \downarrow button to highlight the **BaseManager Update** option, and then press the **OK** button to select it. The BaseManager Update screen displays.

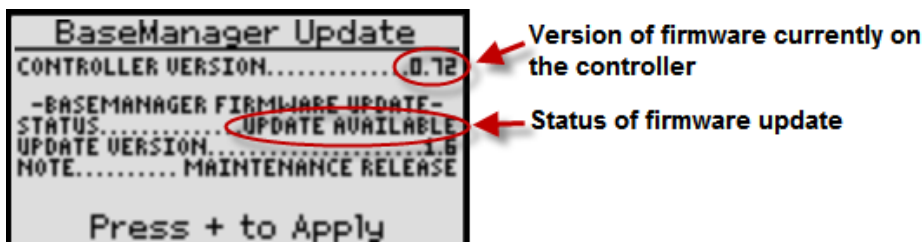

7. Verify that the firmware update is available.
8. Press the **+** button to apply the update. When the update is complete, the controller restarts and briefly displays the new firmware version.

Note: If the firmware did not update as expected, please call Baseline Support at 866.294.5847.