


BL-5200R Series Powered biCoder™ Installation Guide

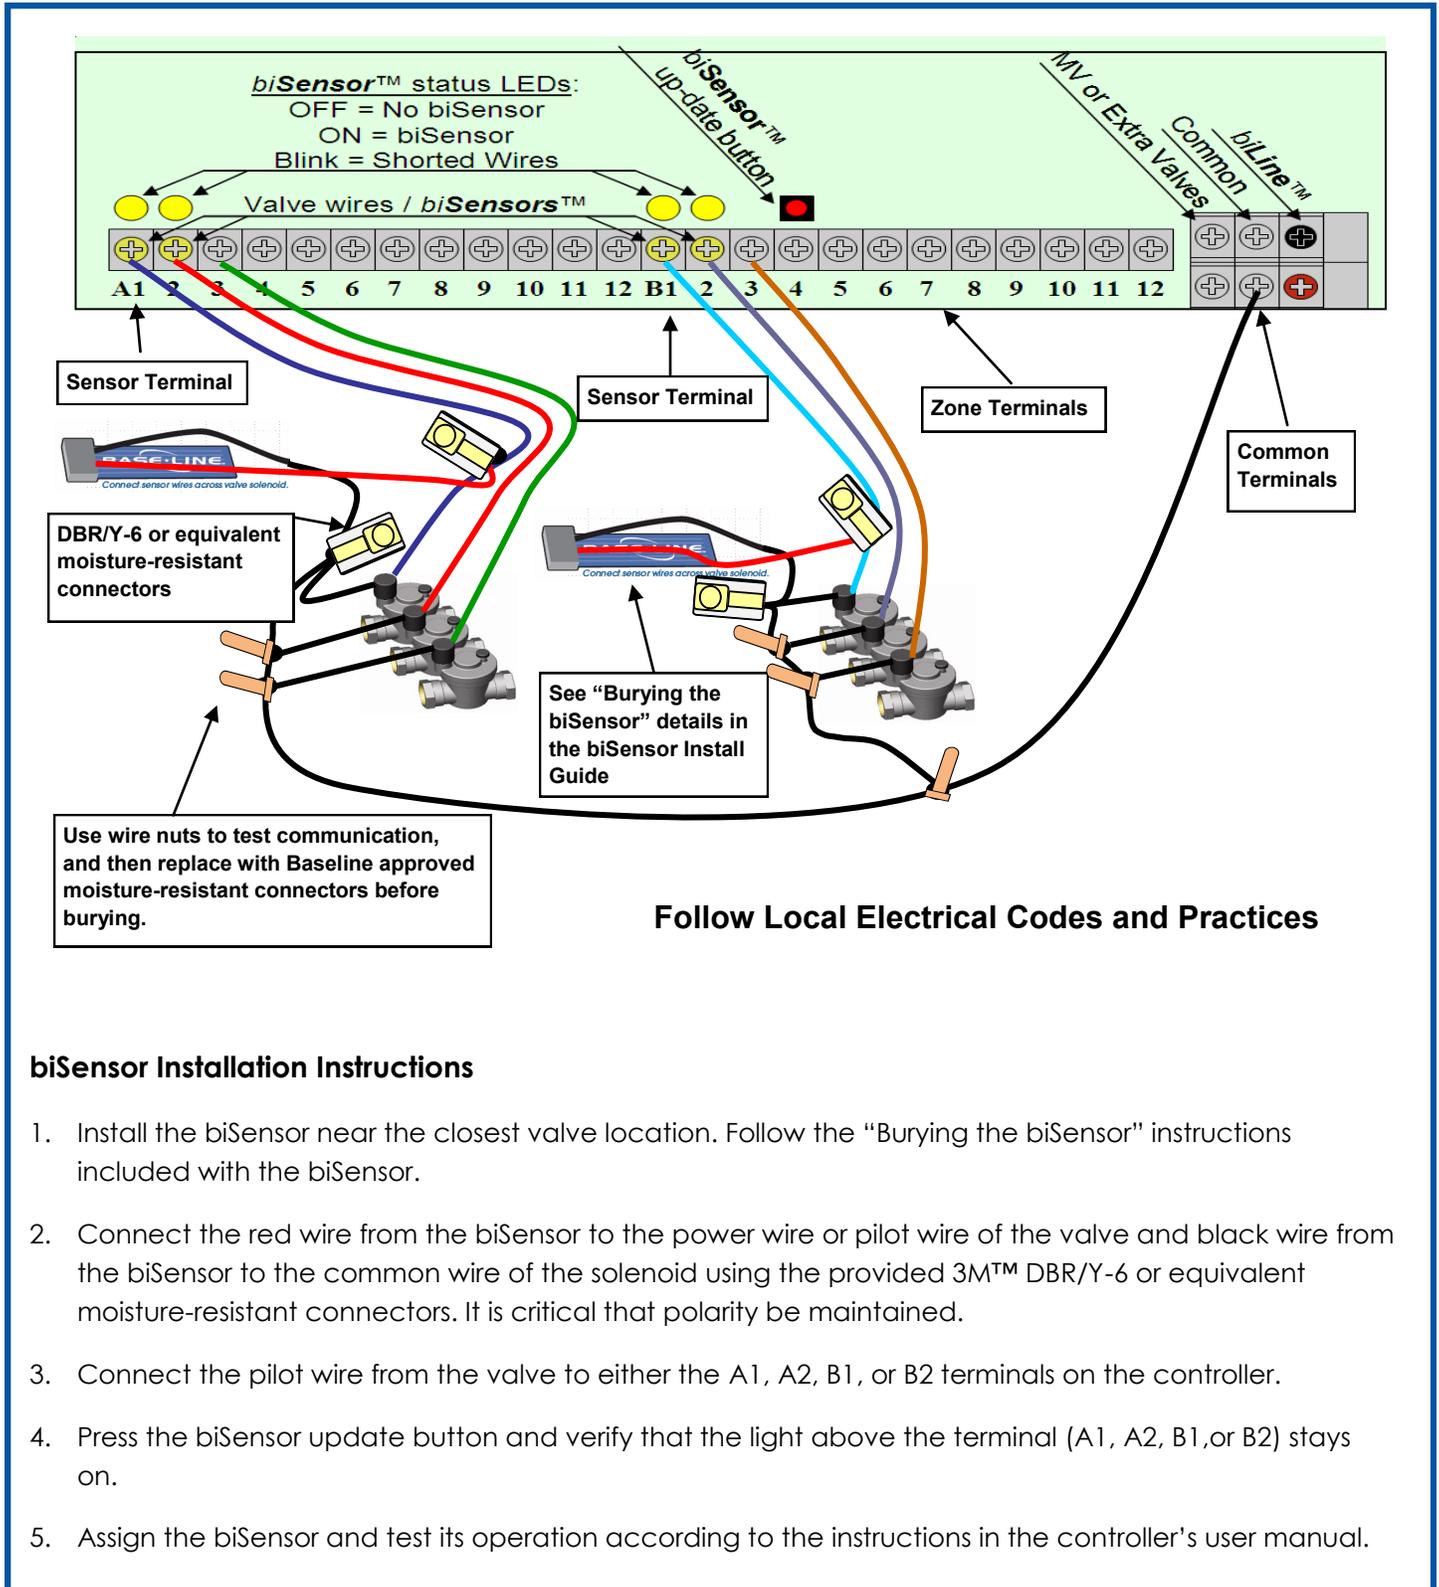

biSensor Installation Instructions

1. Install the biSensor near the closest valve location. Follow the "Burying the biSensor" instructions included with the biSensor.
2. Connect the red wire from the biSensor to the power wire or pilot wire of the valve and black wire from the biSensor to the common wire of the solenoid using the provided 3M™ DBR/Y-6 or equivalent moisture-resistant connectors. It is critical that polarity be maintained.
3. Connect the pilot wire from the valve to either the A1, A2, B1, or B2 terminals on the controller.
4. Press the biSensor update button and verify that the light above the terminal (A1, A2, B1, or B2) stays on.
5. Assign the biSensor and test its operation according to the instructions in the controller's user manual.

